



ABACO MACHINES
OPERATION MANUAL
DOUBLE SIDED SLAB BUGGY
(DSBG1320)



ABACO MACHINES (USA)

14508 S. Garfield Ave., Paramount, CA 90723, USA
Tel : 310-532-0366 Fax : 310-532-0499
Email : sales@abacomachines.com
Website : www.abacomachines.com

V. MAINTENANCE INSPECTION:

- Check and lubricate the wheels regularly.
- Clean the rubber pads.
- Store in cool and clean place.

VI. WARRANTY:

- Warranty term of Double Sided Slab Buggy is calculated from the date of purchase and recorded on Warranty card.
- This warranty does not apply to machines, which, after our inspection, are determined to have been damaged due to neglect, abuse, overloading, accident or improper usage.
- In warranty time, your machines will be replaced spare part without fee.

I.OVERVIEW:

- Double Sided Slab Buggy is used to transport slabs safely and easily.
- Both of the A part and the base are fully rubber lined to protect slabs from scratching, chipping and slipping.
- Compact designed to suit small work areas and doors.

II.STRUCTURE:

- Double Sided Slab Buggy is made of steel.
- Slabs can be placed on both sides of the A-Frames.



SPECIFICATION:

Length (A): 53 ³/₈" (1355mm)


Width (B): 31 ¹/₂" (800 mm)

Height (C): 47 ¹/₁₆" (1195 mm)


W.L.L: 660lbs (300kg) per side - 1320lbs (600kg) total

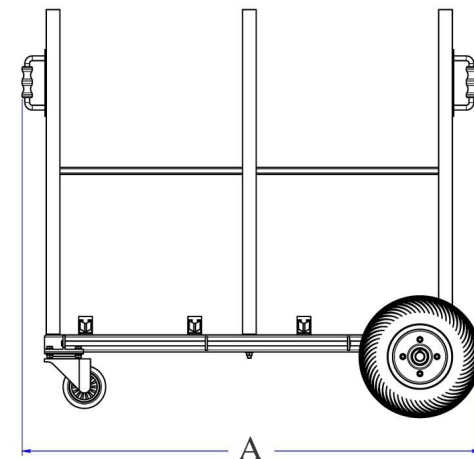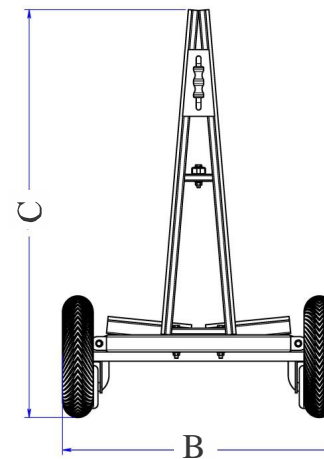

III.ASSEMBLY DRAWING:

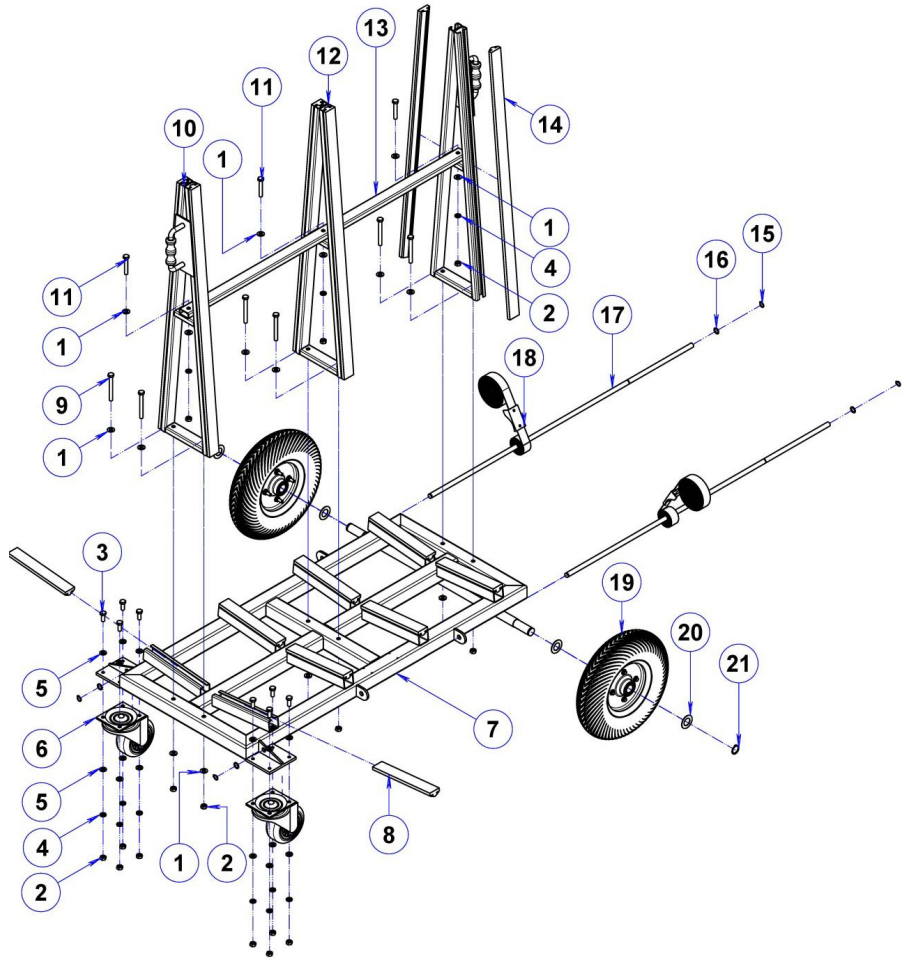


- Unlock the wheels before moving the buggy. (pic 3b).

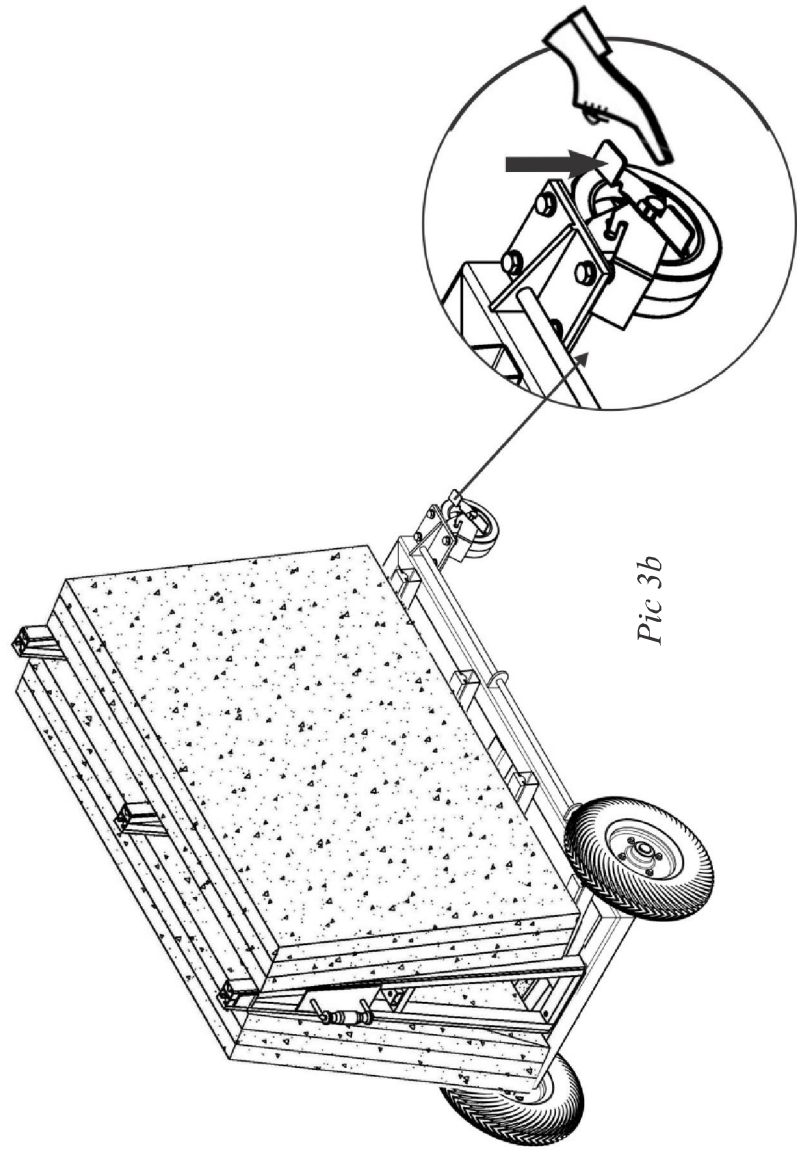

Appendix:

- Lock the gear wheels by pushing the pedal (pic 3a).

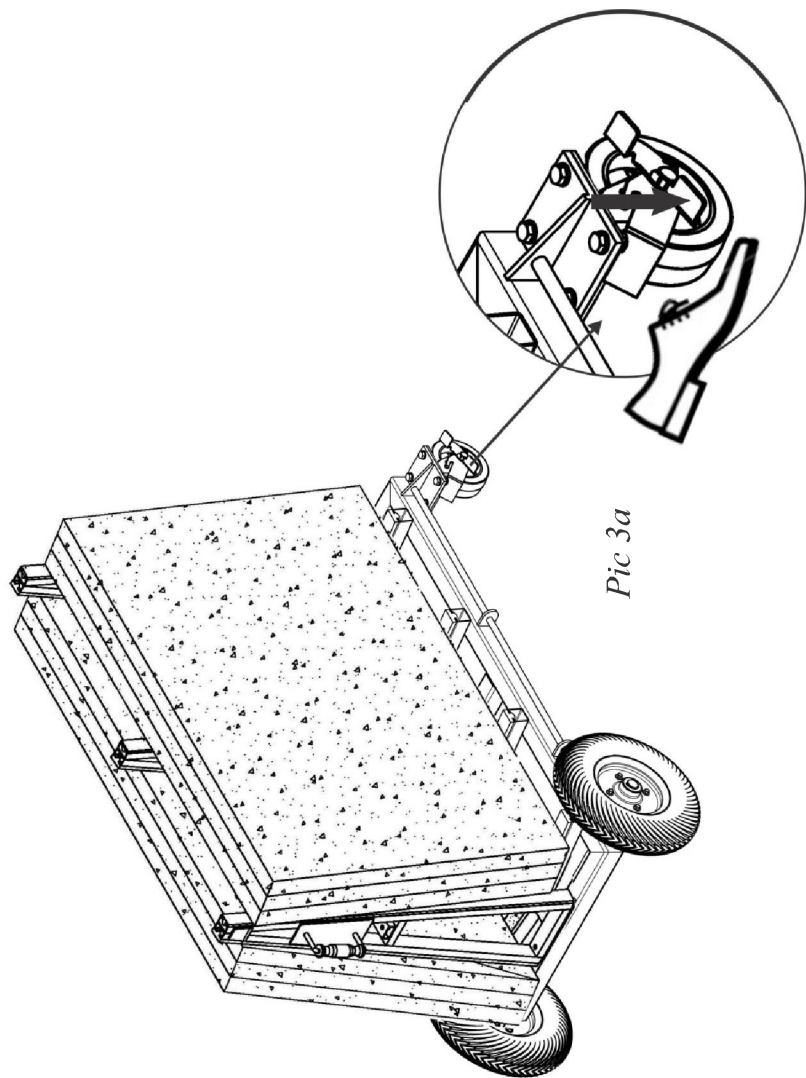

MAIN LIST

POS.	DESCRIBE	QTY.	CODE
1	Washer Ø10xØ22x1.5	18	DSBG1320-01
2	Nut M10	17	DSBG1320-02
3	Bolt M10 x 25	08	DSBG1320-03
4	Washer Ø10	11	DSBG1320-04
5	Washer Ø10xØ22x2.5	16	DSBG1320-05
6	Rotation caster No.5	02	DSBG1320-06
7	Frame pad	01	DSBG1320-07
8	Rubber pad	08	DSBG1320-08
9	Bolt M10x90	06	DSBG1320-09
10	A Frame 1	02	DSBG1320-10
11	Bolt M10x60	03	DSBG1320-11
12	A Frame 2	01	DSBG1320-12
13	Connecting bar	01	DSBG1320-13
14	Rubber pad A frame	06	DSBG1320-14
15	External Circlip	04	DSBG1320-15
16	Washer Ø14xØ20x0.5	04	DSBG1320-16
17	Hook connecting	02	DSBG1320-17
18	Band chain	02	DSBG1320-18
19	Wheel 3.50-6	02	DSBG1320-19
20	Washer Ø25xØ35x1	04	DSBG1320-20
21	External Circlip	02	DSBG1320-21

IV. INSTRUCTION FOR USE

1. Requirement Note:

✓ **Before operation:**

- Check the rubber pads and wheels, if damaged, replace immediately.
- Oil the wheels for good performance.

✓ **During use requirements:**

- Make sure the slab's weight is not over the wheels' loading capacity.
- The slabs must be fixed to the frame during transportation.
- Check the wheels regularly for best performance.

✓ **After operation:**


- Clean and store the buggy when not in use.
- Store in a cool place

2. Device Usage:

Step 1: How to handle the slabs on Double Sided Slab Buggy.

Distribute slabs equally on both sides.

Note: (Lock the wheels before placing the slabs on the buggy– view appendix)

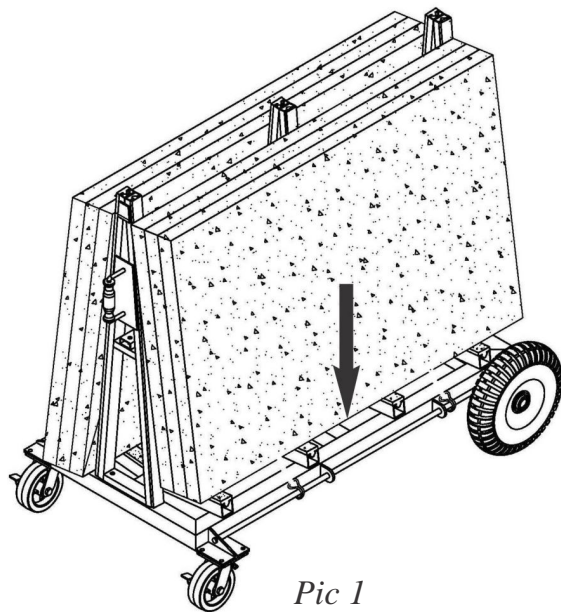

Step 2: Secure the slabs.

Use a couple of ropes to secure the slabs on the buggy tightly before moving. (Unlock the wheels and use the handle and pull forward. –view appendix).

