




**Setting UDG/UCG thermostats to use a 10 KOhm NTC Sensor:**


The following setup must be used in order to have correct temperature control on the UDG/UCG thermostats.

Press the programme button.


1. Select Settings:

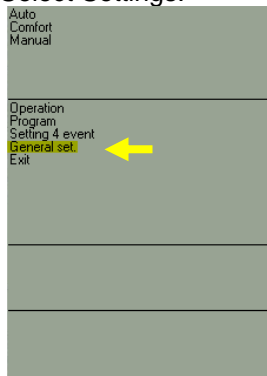

2. Select Offset temperature:

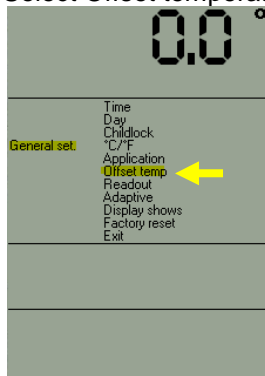


3. Set the offset to -4,5°C or -8.1°F

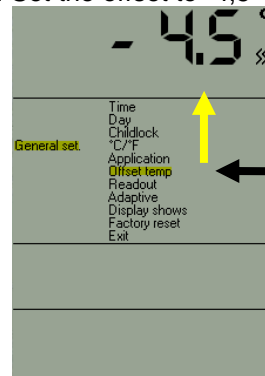

-8.1°F

4. Select Exit

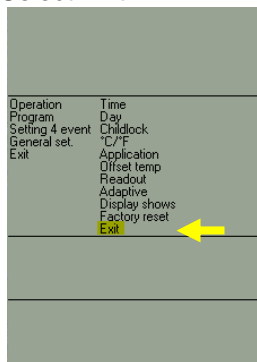

5. Select Main Exit

