


Added Value: 2017 Updates and Changes wedi Fundo Primo Shower Kit

wedi is excited to announce some additions and changes to our Fundo Primo Shower Kits. Starting in 2017, we have added the wedi Mixing Valve Flexi Collar and wedi Flex Collar to all Primo Kits which allows you to have all materials for a complete waterproof shower installation. Additionally, we have updated the kit with the wedi Full Foam Curb Lean, which is gaining popularity in shower design.

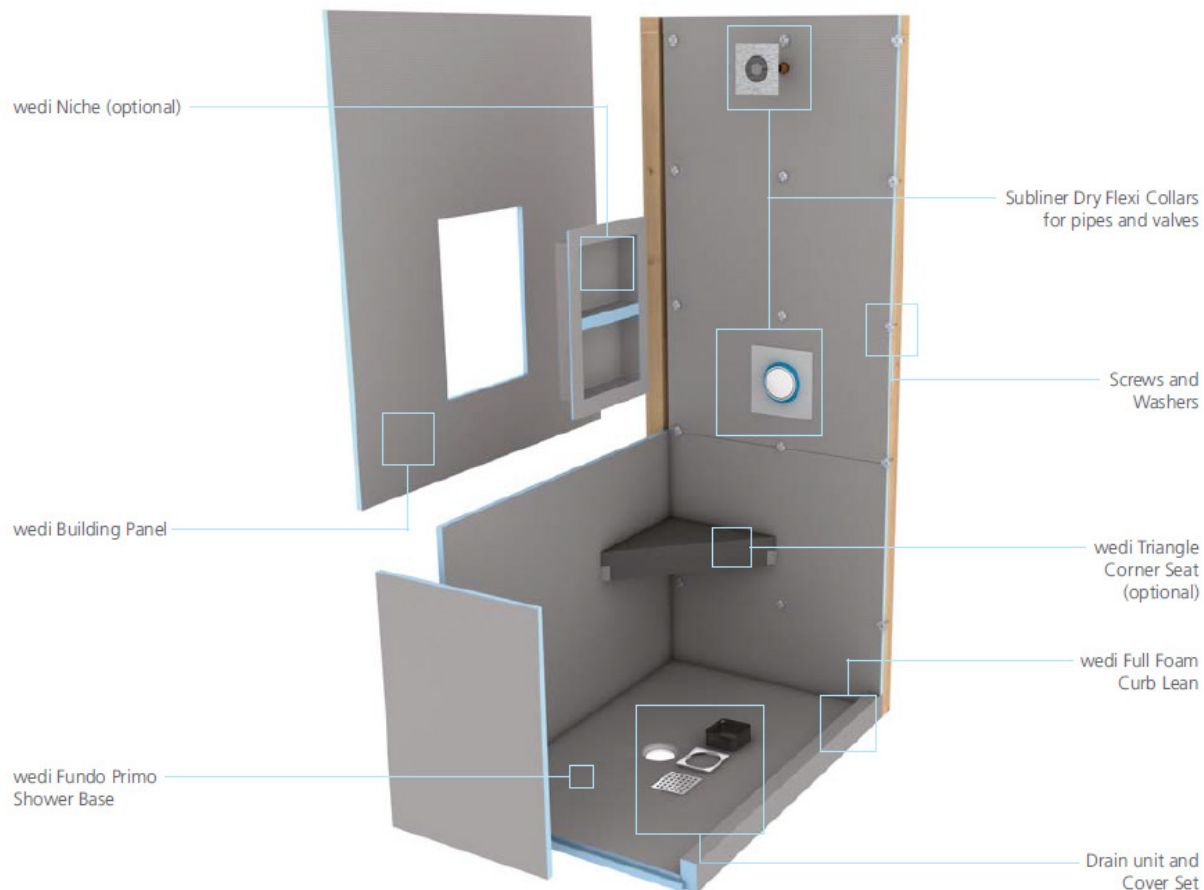

All products needed to build a wedi shower are included and provide a single manufacturer warranty. Safe transportation in one box, easy estimating of product quantities needed.

- Fundo Primo Shower Base
- wedi Drain Assembly and Standard Cover Plate
- 3' x 5' x 1/2" wedi Building Panel (3 walls, 80" high)
- wedi Full Foam Curb Lean
- wedi Washers with Tabs
- wedi 1 5/8" Non-Rust Screws
- wedi Joint Sealant
- wedi Subliner Dry Flexi Collars
- wedi Corner Putty Knife