


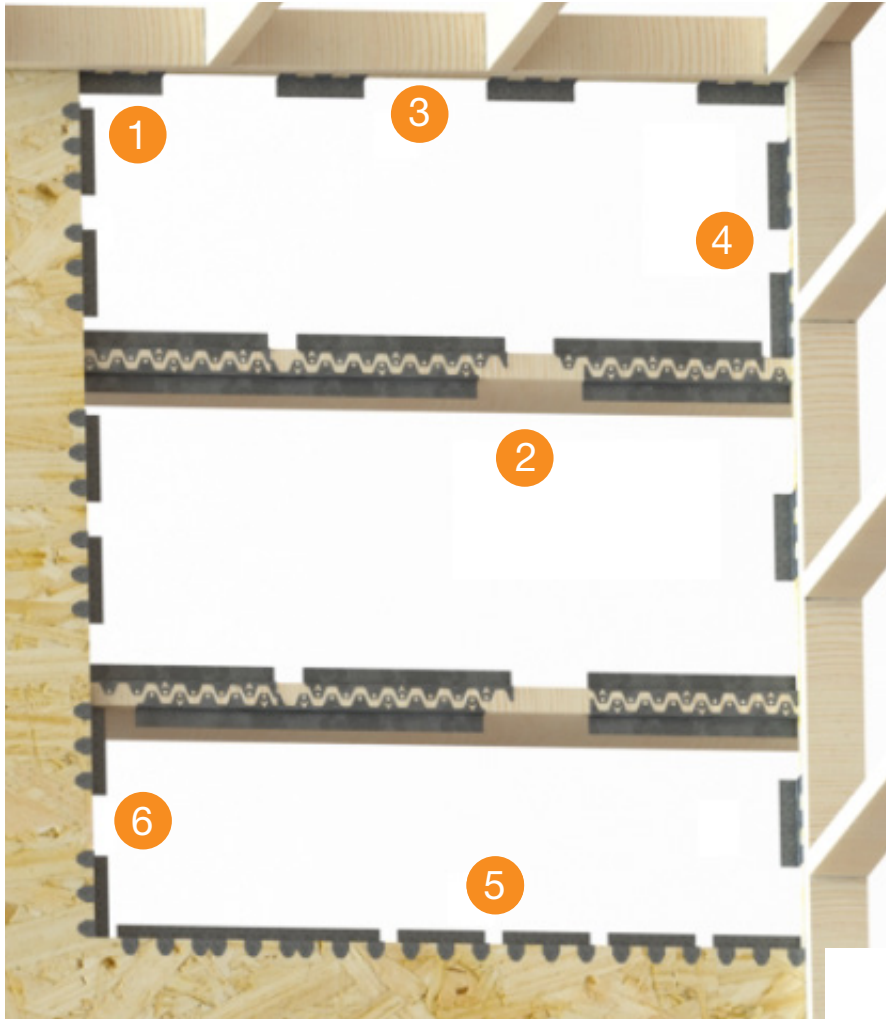


- Spread brackets evenly, when possible, for optimal support.
- Dry fit parts to ensure all requirements are met before proceeding with installation.

1 All corners must be supported.




2 J-bracket placement
• Maximum gap between brackets of 6" (15.2 cm)

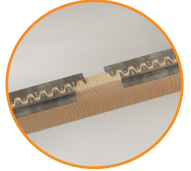

3 P-bracket placement along the wall bottom plate, parallel to the joists
• Maximum gap between brackets of 7" (17.8 cm)



4 P-bracket placement along the wall bottom plate in joist bays
• Maximum gap between brackets of 5.5" (14 cm)

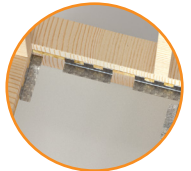

5 P-bracket placement on subflooring parallel to the joists
• Maximum gap between brackets of 1" (2.5 cm)



6 P-bracket placement on subflooring in joist bays
• Maximum gap between brackets of 4.5" (11.4 cm)



- No P-bracket is required in joist bays if they are narrower than 5" (12.7 cm) (width of P-bracket).
- Joist bays narrower than 2" (50 mm) (width of 2 adjacent bracket ledges) must be modified per local building code to provide support for the shower system.