

wedi Shower and Bath Tub Surround Kit

Fast, light, safe shower and tub tilebacker walls

Needed for Installation

- Screw gun
- Utility knife
- Straight edge
- Measure tape
- Caulk gun

Kit included

- (5) wedi 3' x 5' x 1/2" Building Panels
- (5) wedi Joint Sealant, 10.5 oz.
- (1) Mixing Valve Flexi Collar
- (1) Flexi Collar
- (1) Corner Putty Knife
- 100 ct. of wedi Tab Steel Washers
- 100 ct. of wedi Galvanized Screws

Special Features

- 100 % internally and throughout waterproof and not only resistant
- Lightweight and easy to cut cleanly
- Can be notched out on bottom to perfectly connect to a tub flange
- No additional waterproofing needed like with cement or gypsum based baker boards
- Protect your framework and structures against mold, mildew and other water related damage potential using wedi building panels
- Comes with system joint sealant and fasteners
- UPC /IPC approved/complaint
- 10 year warranty


Installation




Measure and cut wedi Building Panel to fit the 16 inch o.c. framework (wood or metal). Notch out all panels if installed around the perimeter of a flange tub to integrate the flange and achieve a plumb wall with square and tight corners.



Attach a notched panel to the framework with a 1/2" bead of wedi Joint Sealant between the notch and flange. Attach the panel to the framework using wedi Washers and Screws at a rate of 1 every 12 inches along the studs. Leave a gap of 1/8" between tub edge and wedi panel bottom end to allow for movement of the tub. Alternatively apply a bead of wedi Joint Sealant in between both materials.

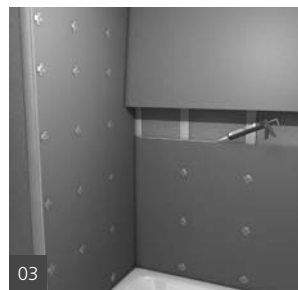

Apply a continuous 1/2" bead of wedi Joint Sealant on the top blue foam edge of the wedi Building Panel before installing the next panel, butting tightly into the sealant. Set another wedi Washer and Screw into the seam to create a flush transition between panels and smooth over excess sealant. When installing a wedi side panel against the already fixed wedi back wall, apply a continuous 1/2" bead of wedi Joint Sealant vertically on the back wall wedi panel where both panels will meet. Apply compression to the wedi Joint Sealant when moving the wedi side panel into position before fastening it.

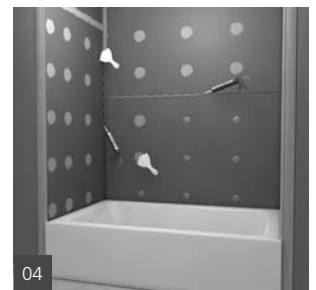

Finally and after all wedi Building Panels are installed a second 1/2" bead of wedi Joint Sealant is applied over all seams and fastener points and spread flat using a putty knife.

wedi Corporation

Tel. +1-847-357-9815
Fax. +1-847-357-9819

info@wedicorp.com
www.wedicorp.com