2019-2020 PRODUCT CATALOG



CUSTOM MADE CUSTOM FIT KNEEPADS

OUR STORY

Since 1989, ProKnee has been servicing the needs of flooring installation and

other construction professionals by offering a complete line of custom made custom fit kneepads. It all began with the Original Model, which sold for 18 years and offered several patent pending features, placing it in a class all by itself. In 2007, after adding several more patented features, the Model 07 was born. In 2014, after 25 years of customer feedback and actual field testing, ProKnee proudly introduced the Model 0714 Standard and Model 0714E Wide. These new models are patented, hybrid versions, of the highly successful Original Model and Model 07 Kneepads.

In 2016, ProKnee revealed a new class of All Purpose Kneepads, the AP16. This compact design is a one of a kind that stays true to ProKnee's form, fit and function by using as many of the Model 0714 features as possible, along with a few patent pending features of its own.

By offering a complete range of kneepads, we can now match a customer's desired comfort to a level of protection unrivaled in today's kneepad market. After over 30 years of specializing in occupational knee injury prevention, we are humbled to find that ProKnee has grown into THE #1 KNEEPAD that professionals in the USA, Canada and around the world prefer.



15T PAIR SOLD 8-18-1988

FIG

1 - 8 0 0 - 5 4 9 - 5 0 1 8 🔘 @PROKNEE

@PROKNEE.TREADMAN

You @MR.PROKNEE

in PROKNEE CORP.



WWW.PROKNEE.COM

JAY HEIGHT: 6'8" Weight: 215 LBS AB SIZE: 24.5" C MEASURE: 14.5" 0714STANDARD

NATE HEIGHT: 5'10" WEIGHT: 230 LBS AB SIZE: 21.5" C MEASURE: 17.5"



CHRIS HEIGHT: 5' 6" WEIGHT: 195 LBS AB SIZE: 21" C MEASURE: 14.5"

0714STANDARD

LAUREN HEIGHT: 6'1" WEIGHT: 225 LBS AB SIZE: 22" C MEASURE: 16" MODEL

HEIGHT: 5'7" Weight: 140 LBS AB SIZE: 19" C MEASURE: 15" ONE SIZE A FIT A 0714 STANDARD

SERVING **PROFESSIONALS IN**

INDUSTRIAL ROOFING GENERAL CONTRACTING MASONRY CONCRETE

GARDENERS, HOBBYISTS

PROUDLY MANUFACTURED IN WHITEFIELD, MAINE **SINCE 1989**





PRO STATS & REVIEWS **SIX MILLION SOUARE FEET** STEVE HEIGHT: 5'10"

WEIGHT: 180 LBS

AB SIZE: 21"

C MEASURE: 14"

0712

STANDARD

CODY

HEIGHT: 6'

AB SI7F- 23"

WEIGHT: 330 LBS

C MEASURE: 18.5"

<u>0714</u>E

JORDAN

0714

STANDARD



" I have been wearing Proknee for 15 years. They are by far the best kneepad for flooring installers. Before I started using Proknees, I would have lower back pain all the time, now I don't." A ALLINE Orr, MN

"Best set of Kneepads on the market".

- Timothy Clinton Lakeland, FL

"I install tile full time and I never have sore knees. Yours ARE THE BEST!"

- Rick D. Ross Bernardston, MA

THE PROKNEE PROMISE

ProKnee offers a 30 day money back "We Guarantee You'll Love Them" policy assuring your satisfaction with our product. If you would like to return your kneepads for a full refund of the product cost, please see your place of purchase. To exchange a size or width call us at 1-800-549-5018 for a Return Authorization #. There will be a 30% restocking fee for exchanged used/worn kneepads, so be sure to try them on before putting them to work.

"I can honestly say I have logged 6 million square feet on my first pair. 20 years doing carpet on concrete at a 66k square foot convention hall... I am on pair number 2, but still bring out the old ones as they are like old friends... Proknee, happy I can still hike thanks to you." - Bob Bav

"We appreciate how Proknee has aligned with our industry to improve our health!"

> - Joni Rocco Parker, CO

Clifton, NJ

"I have had them for approximately 25 years. The best part is you can buy replacement parts!"

> - Mary Ruggirello Walden, NY

"I've had these longer than I can remember. 20 years. maybe more. Did you know when they need a rebuild, they smile ^{at} va?"

- Marty Legarth Killbuck, OH



@MR.PROKNEE

Tube









(O) @PROKNEE


STRAPS, LOCATED WELL BELOW TAKING WEIGHT OFF THE JOINTS KNEE JOINT, HELP ELIMINATE AND SPREADING IT OUT UNCOMFORTABLE PINCHING OVER THE LENGTH OF THE SHINS AND CIRCULATION ISSUES. ENABLES EVEN WEIGHT DISTRIBUTION.



EVEN WEIGHT DISTRIBUTION **CREATES A CENTER OF BALANCE** AT THE MIDPOINT OF THE SHINS (RATHER THAN DIRECTLY ON THE KNEES) AND CREATE STABILITY AS YOU KNEEL WHICH REDUCES PRESSURE AND FORCES THE USER TO USE PROPER KNEELING TECHNIQUES.



A KNEE CUP SHAPE SURROUNDS THE KNEE JOINT AREA TO HOLD THE JOINT TIGHT -ON LITERALLY ANYTHING.



SAFE, RESILIENT AND REPLACEABLE **CELLULAR URETHANE CUSHIONS, WITH** CONSISTENT COMPRESSION SPRINGBACK, HELP ABSORB SHOCK OUT OF DAY TO DAY WEAR AND TEAR KNEELING. FROM

6

<u>@proknee.treadman</u>

You Tube @MR.PROKNEE

FLOOR LINE

in PROKNEE CORP.



CUSTOM FIT VS ALL PURPOSE KNEEPADS FOR ALL COMFORT LEVELS

CHOOSING THE PROPER LENGTH, WIDTH AND MODEL ARE CRITICAL TO ACHIEVING THE COMFORT, HIGHEST PROTECTION AND PERFORMANCE LEVEL FROM OUR LINE OF KNEEPADS. SEE THE COMPARISON BELOW TO FIND OUT WHICH MODEL IS BEST FOR YOU.



CUSTOM FIT KNEEPADS

PATENTED WORLDWIDE

- A PATENTED SHIN SUPPORT SYSTEM that spreads weight across the length of the kneepads and assures kneepads stay in proper position at all times
- 18 LENGTHS that enable strap location well below the knee joint
- 2 WIDTHS in Standard and Wide for an optimal knee cup fit that stabilizes the joint ANTI-TWIST CUFF keeps pads from twisting

MAXIMUM PROTECTION EXTENDED ALL DAY-EVERY DAY USE MADE TO YOUR PERSONAL SPECS

SHARED FEATURES

- 2 CUSHION THICKNESSES in 5/8" and 1" for ultimate shock absorption and comfort level ALL PARTS REPLACEABLE to extend the life of your pads
- NO WRINKLE LINER is hand washable and moisture wicking
- PATENTED KNEE POCKET SHAPE AND FLAT BOTTOM **DESIGN** stabilize knee joint to reduce joint wear-out and knee burn pain
- RUBBER BOOT with tough 3 ply non-skid and non-marking properties upholds against extreme working conditions

PURPOSE KNEEPADS WORLDWIDE PATENTS PENDING

- SLOTTED LOWER FRAME AND LIVE HINGE create a "glove-like" feeling
- SMARTLOCK® QUICK RELEASE BUCKLES keep strap tightness where you want it • RADIUS ON FRAME PERIMETER RIBBING provides
- maximum flexibility in extreme kneeling conditions ADJUSTABLE STRAPS are pre-angled to allow two
- different strap placement options

FULL PROTECTION FOR ALL THE JOBS IN BETWEEN **ONE SIZE FITS ALL**

8

1-800-549-5018 (O) @PROKNEE 🗗 @PROKNEE.TREADMAN

You Tube @MR.PROKNEE in PROKNEE CORP.

WWW.PROKNEE.COM

• 0714/0714E ONLY FEATURES 0714/0714E/AP16 SHARED FEATURES **AP16 ONLY FEATURES**



CUSTOM FIT

•2 Knee Seat Widths: Standard & Wide 18 Lengths

ALL PARTS REPLACEABLE

 Molded in frame components make replacing parts easy, fast and economical

CUSHION INSERT

on both sides

•2 thickness options - 5/8" and 1"

•1 full length piece with wear liner

RUBBER BOOT

 Tough 3 ply non-skid construction Screws to frame •Non-marking material (user's responsibility to keep clean)

NO WRINKLE

LINER •Wicks away moisture •No wrinkle fabrication adds comfort Keeps Cushion Inserts clean Hook 'n Loop locks liner to front & sides

> KNEE POCKET **SHAPE & FLAT BOTTOM DESIGN** •Stabilizes knee joint to

reduce joint wear-out & knee burn pain

BUCKLE MOUNT Longer lasting design Screws to frame

QUICK RELEASE

BUCKLES

•Put pads on/off in seconds



ANTI-TWIST CUFF Molded in design •Wraps around 9" of lower leg

MODULAR CURVED STRAP/BUCKLE MOUNT

•Pre-shapes and protects Anti-Twist Cuff •Extends life of Cushion Inserts

PATENTED FRAME COMPONENTS RIBBED THROUGHOUT

•Coupled in a way to spread heavier loads with less deflection

BOOT PLATE

•Extends life of Rubber Boot Shields ribbing





RADIUS ON FRAME PERIMETER RIBBING

•Provides maximum flexibility in extreme kneeling positions

QUICK RELEASE BUCKLES •Positively locks in your strap length



ADJUSTABLE STRAPS •Pre-angled to allow two different strap placement options

TOE SPRING •Front end angles up 101/2° •Makes "walking" on knees more natural

1-800-549-5018 (O) @PROKNEE

LIVE HINGE •Creates "Fit like a glove" feeling

@PROKNEE.TREADMAN

You Tube





ALL PURPOSE KNEEPADS

WORLDWIDE PATENTS PENDING


5/8" SKU: AP58 1" SKU: AP1

GET YOUR CUSTON FIT MEASURE IN 3 SIMPLE STEPS

1. REMOVE SHOE.

- 2. MEASURE FROM FLOOR (A) TO TOP OF KNEECAP (B), WHILE STANDING.
- 3. MEASURE AROUND WIDEST PART OF YOUR CALF MUSCLE (C) WITH WORK PANTS ON.

*Which width you receive is determined by (C) measurement. 17.5 or larger default to Model 0714E WIDE

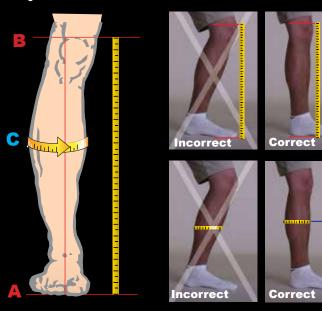

ProPointer 1" vs 5/8" cushions

Over 75% of our customers prefer 1" Cushion Inserts.

We recommend 1" if the following conditions apply:

- If you are working on your knees at least 8 hours per day
- If you have had any knee problems or surgery
- If you weigh more than 200 lbs

12

 If you prefer the maximum protection that ProKnee has to offer





ENSURING PROPER FIT IS CRUCIAL TO DELIVERING OPTIMAL COMFORT AND PERFORMANCE

ProPointer

Knee should fit snug in cradle of knee cup while thigh should align flush with front edge of cushion +/- 1/4"



You @MR.PROKNEE


REBUILDS AND REPLACEMENT PARTS O do a complete rebuild of your kneepads **2 WAYS TO RENEW O** buy only the parts you need!

a. Purchase a Complete Rebuild Kit and rebuild them yourself OR
b. Send them into the factory and we'll do the work for you – at no additional charge! *

*MUST have a RETURN AUTHORIZATION # BEFORE sending kneepads to the factory. See your local distributor or call 1-800-549-5018 for yours!

*If purchased before 2/1/07, kneepads sent to factory will be rebuilt using Model 07 specs. All other models will be rebuilt to the same model specs as when they arrive at the factory.

*Rebuilds can only be completed if the kneepad frames are intact - no cracks, breaks etc. Customer is responsible for ALL shipping and handling costs.

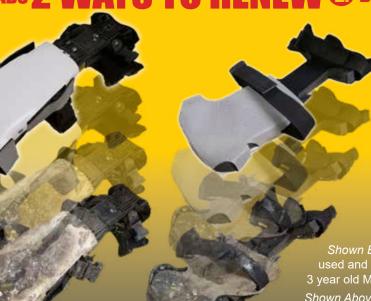

Shown Bottom used and abused: 3 year old Model 0714 Shown Above like new: Same pair with 0714 Complete Rebuild Kit

We offer a variety of individual parts and parts kits options to suit your every need. Upgrade what you want; when you want. Replacement parts make your old pads look and feel just like new!



AB Size Chart Original & Model 07 Only

3 in = AB 17.5 3½ in = AB 18

4 in = AB 18.5 4½ in = AB 19.5 5 in = AB 19.5 6 in = AB 20.5 6½ in = AB 20.5 7 in = AB 21.5 7½ in = AB 22.5 8 in = AB 22.5

9 in = AB 23.5

9½ in = AB 24

10 in = AB 24.5

10½ in = AB 25

11 in = AB 25.5

WHAT SIZE DO I HAVE?

Your EXACT kneepad size is necessary when ordering a Complete Rebuild Kit.

Original Model & Model 07



STEP 1. Place kneepad as shown and refer to area indicated by red box.

1-800-549-5018 (O) @PROKNEE



STEP 2. Engraving indicates your AB size. If no engraving, go to Step 3.



STEP 3. Measure distance from bottom edge of white boot to arc of frame as indicated above. Match your measurement to size chart at left.

Model 0714 & 0714E

STEP 1. Place kneepad

as shown and push cushion

to right to expose numbers

as indicated by red box.




STEP 2. The number that lines up with "AB" is the size of your kneepad.





in PROKNEE CORP.



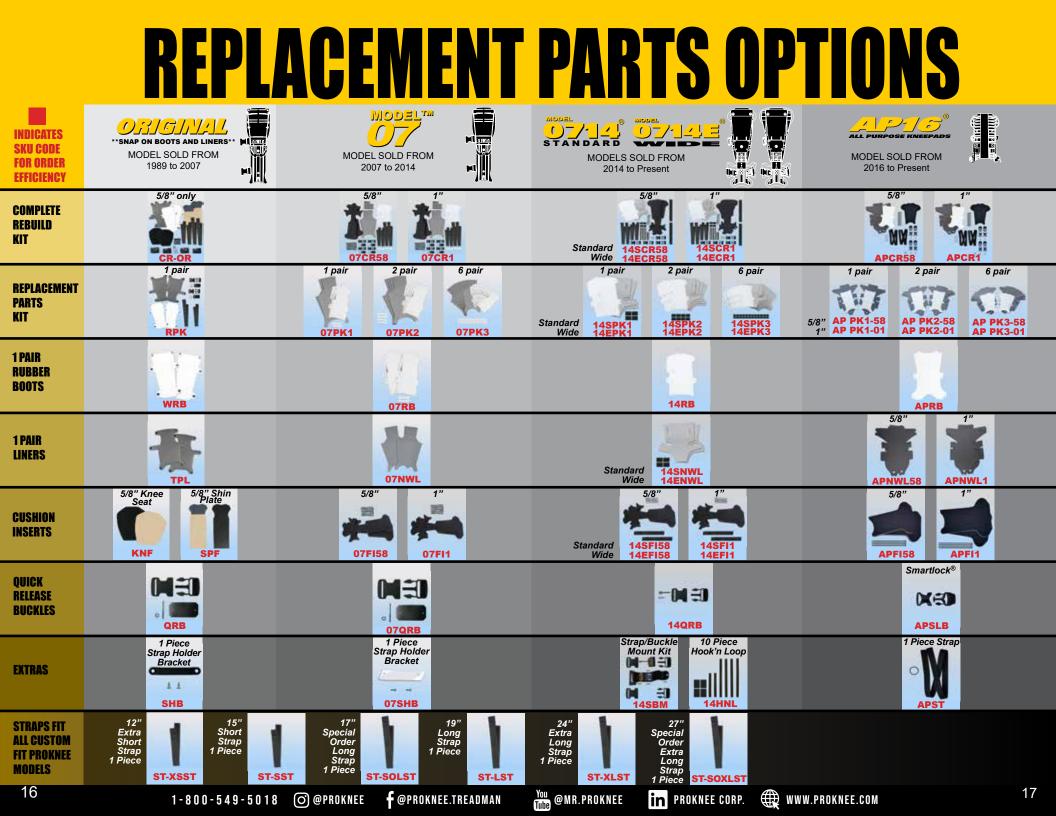

PROTHOUGHT Products



SKU: GPWT

The most accurate & easiest method of trimming direct glue-down & inflexible carpets perfect the first time

NEW PATENT PENDING FEATURES INCLUDE:

- Super strong molded plastic frame components
- Threaded steel inserts & hardware
- Automatic blade depth adjustment stop
- PLUS: • Trim soft sheet goods, cove base toe & carpet easily in one pass

SKU: OSCC

5

<u>Over</u>

You Tube

@MR.PROKNEE

• Uses standard slotted blades

ТМ

Use with right or left hand

SET-UP IS AS SIMPLE AS 1 • 2 • 3



Blade Hold-Down

Loosen Blade Hold-Down screw 1/4 turn.

1



Insert screwdriver into slot, pushing blade until screwdriver automatically stops. Then tighten Blade Hold-Down screw.

2

I - 800 - 549 - 5018 (O) @PROKNEE



eel Adjuster

Step Loosen screw and move Heel Adjuster down until blade contacts surface. Then tighten screw.



Illustration above shows left hand cutting position. Photo at left shows right hand cutting position.

@PROKNEE.TREADMAN

Prokne **AVAILABLE IN SIZES M-3XL SKU: PROSS** TM **ProPouch**[™] SKU: PRPH 4" tool pouch with cut proof construction

AVAILABLE IN SIZES L-2XL

Shown Top Left to Right: Hard•Softgoods Pro, Ceramic•Stone Pro, ProKnee Safety Orange, ProKnee Black, ProKnee Safety Green, Wood Flooring Pro, Flooring Pro [Not Shown: Carpet Pro] Shown Right/Back View: Mr.ProKnee & Sidekick AP Illustration

in PROKNEE CORP.

∰

WWW.PROKNEE.COM



SKU: PRO-W

Want a tool that cuts installation time in half, while side stepping pattern scribing or using tricky technical techniques?

TREADMAN

MULTI - ANGLE STAIR TREAD CUTTING SYSTEM

- QUICK, ACCURATE MEASUREMENTS USE AS A CUTTING GUIDE WHILE TRANSFERRING STAIR GEOMETRY TO **RUBBER TREADS**
- ADDITIONALLY USE TO MARK OUT HARDWOODS, TILE, CERAMICS, AND ANY **OTHER HARD SURFACE MATERIAL**
- PORTABLE AND LIGHTWEIGHT AT 6.5 LBS • DEPTH ADJUSTMENT FROM 10" TO 13-1/4"
- ADDITIONAL EXTENSION KITS AVAILABLE FOR EXPANDED WIDTHS FROM 22-1/2" to 9'-1/2"
- ADDITIONAL BLADE FRIENDLY SELF STORAGE BOX DOUBLES AS EXPANDED **HEAVY DUTY CUTTING SURFACE**
- ERGONOMIC KNOB LAYOUT FOR EASE OF USE
- ALL WALLPLATES ADJUST TO ALL WALL ANGLES
- 1/16" STEEL PLATES FOR MAXIMUM ACCURACY

SHOWN: STANDARD TREADMAN ADJ. FROM 35 1/4" TO 61 1/2" **SKU: TRDM**

Pro<u>Pointer</u> **HOW'S IT WORK?**

1-800-549-5018 (O) @PROKNEE

By securely locking in each step/tread's specific geometry, Treadman acts as your template and cutting guide for quick, accurate and perfectly cut stair treads every-step-of-the-way!

THE COMPLETE LINEUP SKU: TRDM-LINEUP (COMPLETE LINEUP INCLUDES TRDM, TRDM-STEPKIT, TRDMBO, TRDM-EXT1, TRDM-EXT2, TRDM-EXT3)

US Pat # 8561311B1

STANDARD TREADMAN WITH TOOL BOX/ CUTTING BLOCK SKU:TRDMB1

11

DOES 1 PIECE STEP/RISER

MINUTES



1 PC STEP/RISER TEMPLATE KIT SKU: TRDM-STEPKIT



EXTENSION KIT 1 ADJ. FROM 4' 8 %" TO 6' 11" SKU: TRDM-EXT1



EXTENSION KIT 2 ADJ, FROM 6' 10 3/8" TO 9' 1/2" **SKU: TRDM-EXT2**

(1)

CUTTING BLOCK **SKU: TRDMBO**

TOOL BOX/



EXTENSION KIT 3 ADJ. FROM 22 ½" TO 36" SKU: TRDM-EXT3



20

@MR.PROKNEE

lin PROKNEE CORP. WWW.PROKNEE.COM

FREQUENTLY ASKED QUESTIONS

Q. What applications can ProKnee Kneepads be used for?A. Our kneepads can be used when working with carpet, hardgoods, softgoods, VCT, ceramics, hardwood, laminates, epoxy, concrete finishing, carpentry, roofing (with approved safety tie off devices), HVAC, automotive, airline, ironwork and more...

Q. How long will it take for me to get used to wearing ProKnee Kneepads?

A. It varies from 1 day to 1 week, depending on usage and application.

Q. When installing carpet, can I still use ProKnee Kneepads when kicking my knee kicker?

A. Approximately half of our carpet installer customers use them with a knee kicker.

Q. How long will ProKnee Kneepads last?

A. This depends on the application they are being used for, and the care and maintenance performed by the user. Replacement parts are available and recommended to extend the life of the kneepads.

Q: How do I measure to ensure a correct fit for the custom fit ProKnee Kneepads?

A. Use the ProMeasure available at participating distributors (or a tape measure if not available) to take the measurements that are required for a proper fit - "AB" and "C" measurements.

- 1. The "AB" measurement is taken from the floor to the top of the kneecap, standing straight with shoes removed. (PLEASE do not subtract an inch or two to adjust for the shoe or boot - this will not give an accurate size).
- 2. The "C" measurement is taken around your leg at the widest part of the calf muscle. This will tell us both the correct strap lengths for the kneepad and whether you need the Standard or Wide model of kneepads.

Q. I thought I measured properly, but I'm not sure my kneepads fit correctly. How can I tell?

A. Using the ProMeasure or following ProKnee measuring guidelines will work for the majority of our customers. However, if someone has a high instep or tall boots, it can throw off the size. Please verify that you have the correct size kneepads BEFORE you wear them to avoid a restocking fee. If you have the correct size, the kneepads will sit on the top of your shoe/boot and will be $+/- \frac{1}{4}$ " from top of kneecap.

Q: Can I exchange kneepads that are the wrong size or width?

A. Yes, ProKnee allows size/width changes for kneepads within 30 days of purchasing. To exchange a size or width, call us at 1-800-549-5018 for a Return Authorization #. There will be a 30% restocking fee for exchanged used/worn kneepads, so be sure to try them on before putting them to work.

Q. I ordered parts, but think I may have ordered the wrong ones.

They don't fit my kneepads. Can I exchange them for the correct parts? A. Yes, parts can be exchanged within 30 days of purchasing, if new and unused. See above on completing an exchange.

Q: Are parts interchangeable between all kneepad models? A. No. All Proknee Kneepad models have different fitting parts. When ordering replacement parts, you will need to know which model kneepads you have so you can order the correct fitting parts.

Q. What kind of warranty does ProKnee offer on their kneepads?

A. We warranty the plastic frames and buckles against breakage, Cushion Inserts against losing their compression set (if cushions feel flat), and separation of cushions from the frame (slight tearing of cushion where attached to the frame is considered normal and excluded from warranty).

WARRANTY IS VALID FOR ONE YEAR FROM DATE OF PURCHASE - Keep your receipt!

If you have a warranty issue, contact us at 1-800-549-5018 to receive a Return Authorization #. You will need to send the kneepads into our Repair Department for evaluation. We will either fix or replace any parts that are covered under the warranty.

Q: Are the Original Model and/or Model 07 Kneepads still available for purchase?

A. No. ProKnee is no longer manufacturing our Original Model or Model 07 Kneepads. However, all parts are still available to purchase for both models, individually or in various kits. Also, our Repair Department will continue to rebuild Model 07 kneepads and rebuild Original Model to Model 07 specifications.

Q. Can Original Model or Model 07 Kneepads be upgraded or rebuilt to the new Model 0714 or Model 0714E specs?

A. No. Unfortunately, the frame components are different on the Model 0714/0714E Kneepads and cannot be changed over from the Model 07 or Original Model.

Q: Can ProKnee Kneepads be rebuilt?

You Tube @MR.PROKNEE

A. Yes. As long as the frame is in good condition (no breaks or cracks), ALL models of kneepads can be rebuilt either at the factory or by purchasing a Complete Rebuild Kit. Be aware that all models have different fitting parts, so if ordering the kits, make sure you know which model kneepads you need to rebuild and refer to the model when ordering.

Please Note: Original Model Kneepads sent to the factory will be converted to Model 07 specs. The factory DOES NOT rebuild with Original Model parts. If you do not want your kneepads converted, you must order an Original Complete Rebuild Kit and rebuild your kneepads yourself.

Q. If I send in my kneepads for a Factory Rebuild, how long will it take?

in PROKNEE CORP.

A. We know it is hard to be without your kneepads, so we try to have a quick turnaround time. Once we receive them in our Repair Department, it usually takes 2-4 business days to rebuild and ship out. Keep in mind, the time shipping them to us and us shipping them back to you can be anywhere from 2-10 business days depending upon where you are in the US or Canada. (Example - Shipping via UPS - Virginia is 2-3 business days and California is 5-6 business days - each way).

1-800-549-5018 (O)@PROKNEE

@PROKNEE.TREADMAN

WWW.PROKNEE.COM



CHARGER

DISTRIBUTED BY:

KNEE PROTECTION FOR THE PROS

ð

Proknee° PRO KNEE° 0714 0714E AP16 TREASMAN SMARTLOCK Goof Proof are Registered Trademarks of PROKNEE® CORP.

 MODEL™
 ProMeasure
 ™
 Overshoulder
 ™

 Trade t**
 ProPouch™
 ProThought**
 ProThought**

 are Trademarks of PROKNEE® CORP.

U.S. Patent Numbers 4772071, 4876745, 7937769, 10441007, 8561311 B1 Other Patents Pending, CANADA Patent Number 2617789

©ProKnee October 2019 All Rights Reserved